


# ADAPTING A MULTI HEAD CORKER

# STL

Contact us or your preferred supplier for detailed installation and setup details.

Not all machines are alike. If the concepts in this schematic do not suit your machine please contact your local supplier or ZORK for a customised solution.

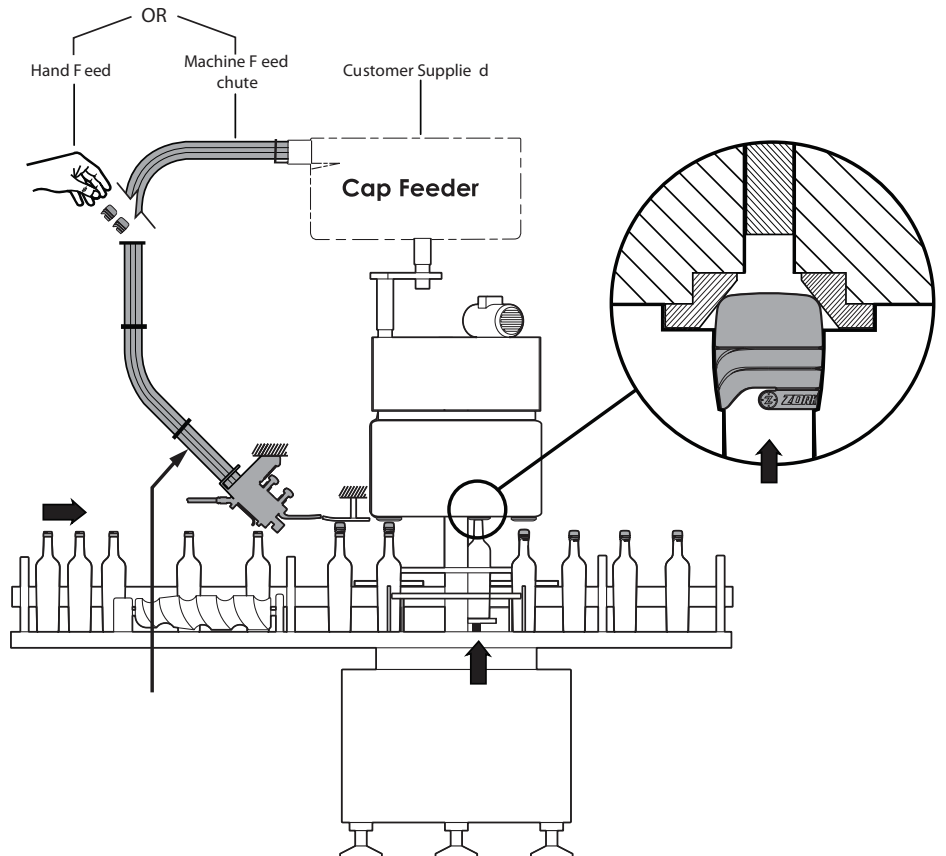

# ZORK

951 Douglas Road  
Batavia, IL 60510  
t + 1-866-996-ZORK (9675)  
f + 1-630-406-8442  
e mcarofanello@zorkusa.com  
w zorkusa.com

STL capping recommendations are subject to change without notice. Regular updates are available at [www.zork.com.au](http://www.zork.com.au)

Rev: ZSTLJun\_09\_V1.1