


ADAPTING A SINGLE HEAD CORKER

STL

Contact us or your preferred supplier for detailed installation and setup details.

Not all machines are alike. If the concepts in this schematic do not suit your machine please contact your local supplier or ZORK for a customised solution.

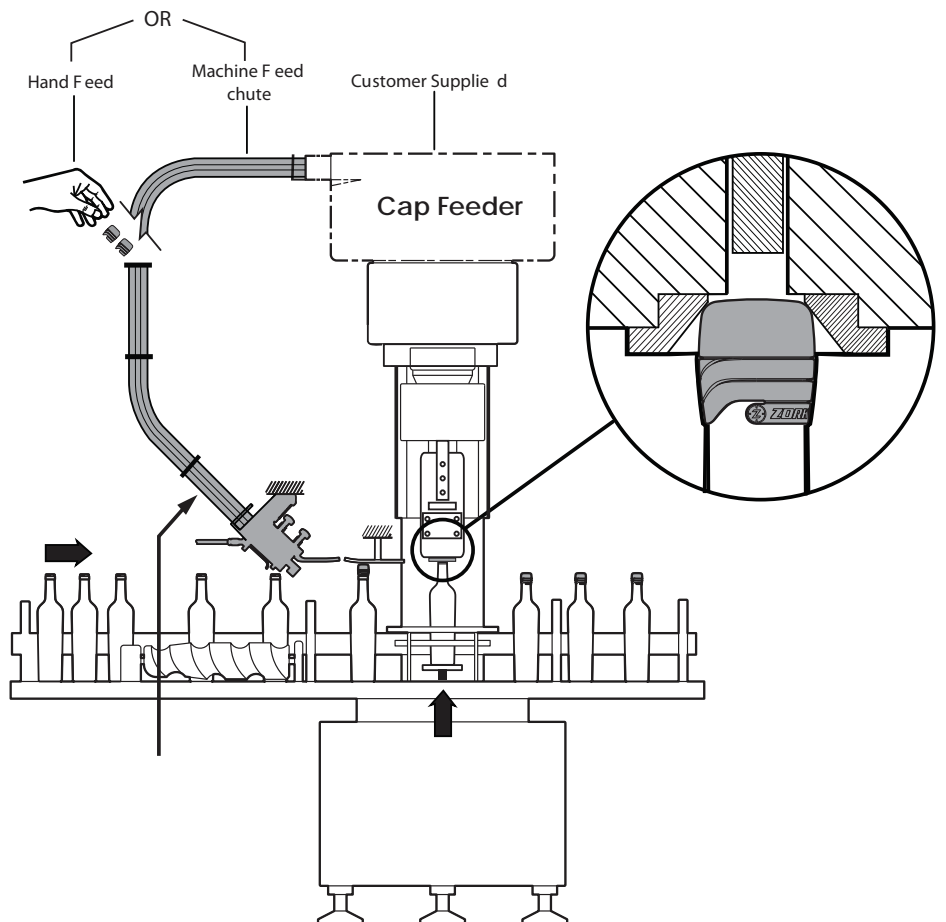

ZORK

7 Hackney Road
Hackney SA 5069
t +61 8 8363 5635
e zork@zork.com.au
w zork.com.au

STL capping recommendations are subject to change without notice. Regular updates are available at www.zork.com.au