


# ADAPTING A SINGLE HEAD SCREW CAPPER

**STL**

Contact us or your preferred supplier  
for detailed installation and setup details.

Not all machines are alike. If the concepts in  
this schematic do not suit your machine please  
contact your local supplier or ZORK for a customised  
solution.

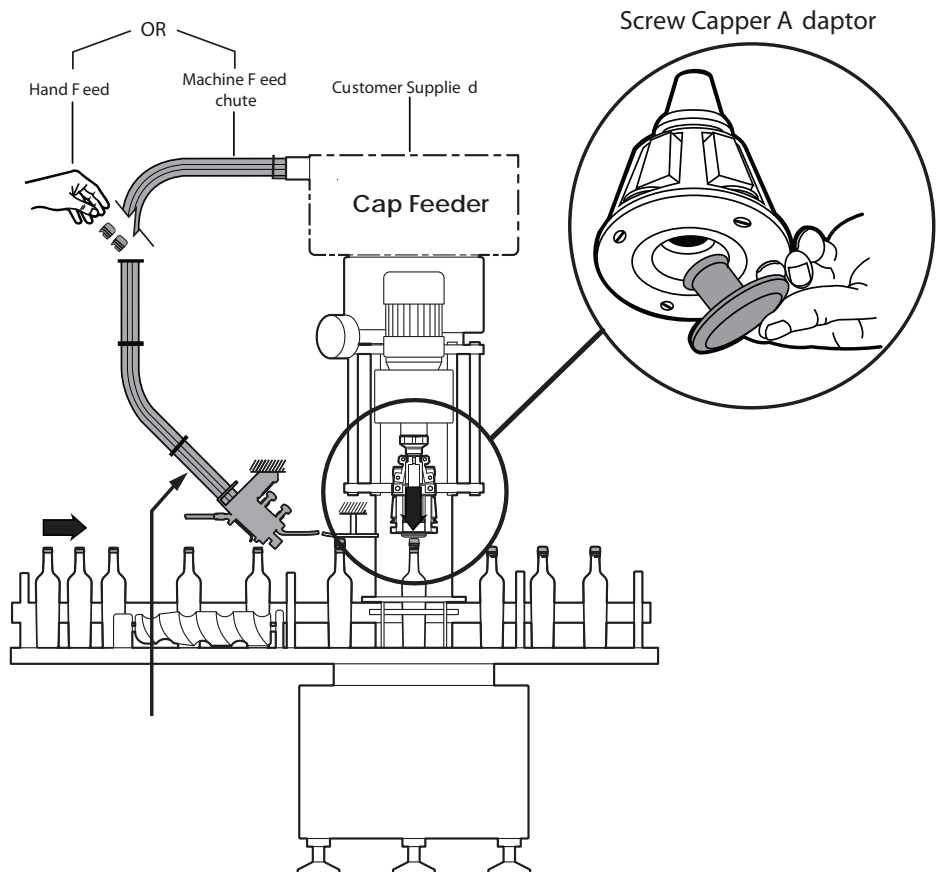

**ZORK**

7 Hackney Road  
Hackney SA 5069  
t +61 8 8363 5635  
e zork@zork.com.au  
w zork.com.au

STL capping recommendations are subject  
to change without notice. Regular updates  
are available at [www.zork.com.au](http://www.zork.com.au)