
 
 

 
 





Contact us or your preferred supplier for detailed installation and setup details.

### COMPONENTS

Contact us or your preferred supplier for installation and setup details.

- 1  Head Bracket
- 2  Middle Bracket
- 3  Machine Feed Guide  
750
- 4  Hand Feed Guide
- 5  Main Feed Guide
- 6  Dispenser

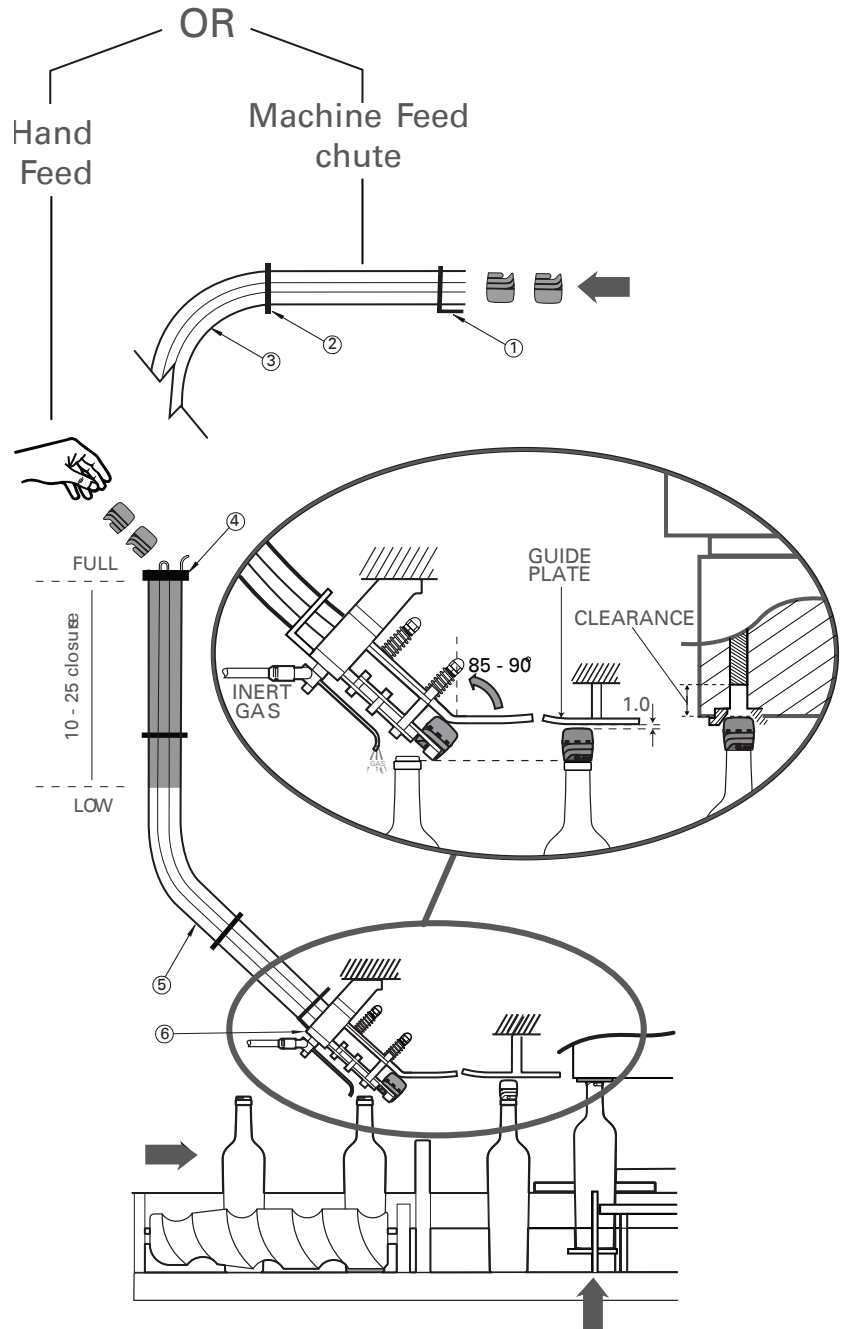

7 Hackney Road  
Hackney SA 5069  
t +61 8 8363 5635  
e zork@zork.com.au  
w zork.com.au

Not all machines are alike. If the concepts in this schematic do not suit your machine please contact your local supplier or ZORK for a customized solution.

STL capping recommendations are subject to change without notice. Regular updates are available at [www.zork.com.au](http://www.zork.com.au)