
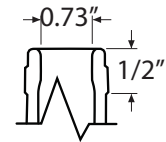
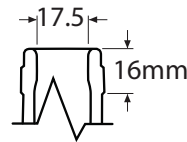


GUIDELINES FOR GLASS

STL

STL has been designed to suit standard cork mouth bottles.

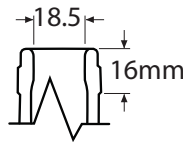

"I'd rather bottle with ZORK than other closures any day. It makes my life heaps easier. No vacuum problems, no looking after corker jaws, no Bell Guide changes, no vacuum pumps, no tuck and thread rollers, no breaking bridges, no torque tension settings. You don't have to treat them like babies. You'll break the bottle before you break a ZORK."

Brett Forsyth
Bottling Manager / Red Knot Wines

CRITICAL DIMENSIONS

There are three main areas of a cork mouth finish that are important to the correct fitment of STL:

- 1 Distance from top of the bottle to the underside of the band.
- 2 Internal bore diameter of the bottle.
- 3 Finish quality on the top edge of the bottle must be free of defects.

SUPPLIERS

The following suppliers have been validated regarding the manufacturing tolerances for their cork mouth and finishes.

Please contact your glass supplier for details and quote the finish specification number below.

CE.T.I.E.

Finish Specification No: GME 50.1
www.cetie.org

O-i Australia

Finish Specification No: (ACI) GCM-39197-A
www.o-i.com

Amcor

Finish Specification No: C02
www.amcor.com

Saver Glass

Finish Specification No: Bague code 0755
(Plate Unique TR)
www.saverglass.com

G.P.I.

For GPI Bottle finishes, refer:
www.zorkusa.com

Note: For validation of new suppliers please contact ZORK.

STL capping recommendations are subject to change without notice.

To order a STL Starter Pack or access regular updates, visit zork.com.au

BOTTLING

Simple

- Application options for all run sizes.
- Simple, adaptation to existing screw capping or corking line.
- Tolerant to bottle variation and sensitive equipment adjustment unnecessary.
- Immediate upright storage – no lay down or inverting required.

Reliable

- Low equipment maintenance due to fewer moving capping parts.
- 5+ years product shelf life (when bottled and stored as per recommendations).
- No cork taint or random oxidation.
- Robust and tough – no denting at any stage of the line – off and on the bottle.
- Clean.

High Speed

- Fast fill of cork mouth bottles.
- Simple and fast line set up / changeovers.

ZORK

7 Hackney Road
Hackney SA 5069
t +61 8 8363 5635
e zork@zork.com.au
w zork.com.au